INSIGNIA™

Quick Setup Guide | NS-32D220NA16
32" 720 p • 60Hz, LED TV

## INCLUDED ACCESSORIES

Remote control and
two AAA batteries

Power adapter

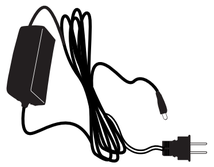

TV stands

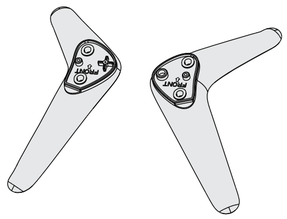

M4 screws
(15 mm length) (4 pcs.)



**FIND YOUR *USER GUIDE* ONLINE!**
Go to www.insigniaproducts.com, then click **Support & Service**. Enter **NS-32D220NA16** in the box under *Manual, Firmware, Drivers & Product Information*, then click ►.

**STOP**
Do not plug your power adapter in until all other devices have been connected.

## 1 START HERE

How do I attach the stand to my TV? (not for wall mounting)

**You'll need**: Soft surface and a Phillips screwdriver.

**A** Carefully place your TV face-down on a cushioned, clean surface.

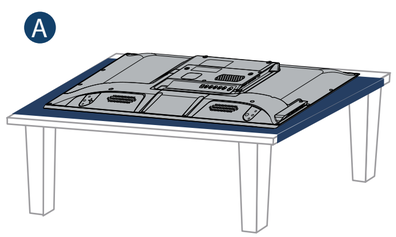

**B** With the stand legs pointing outward, align the raised area of the left stand with the indentation on the TV, then secure the stand to the TV with two of the provided screws.

**C** Repeat to attach the right stand.

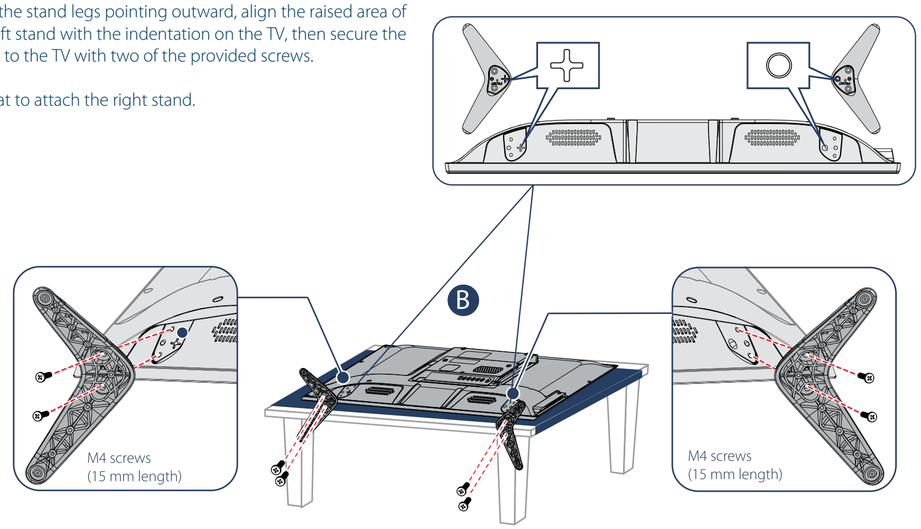


## WALL MOUNT

How do I prepare my TV for wall mounting? (not for use with a TV stand)

**You'll need**: Soft surface

**A** Carefully place your TV face-down on a cushioned, clean surface.

OR

**B** See the instructions that came with your wall mount for more information about how to correctly mount your TV.

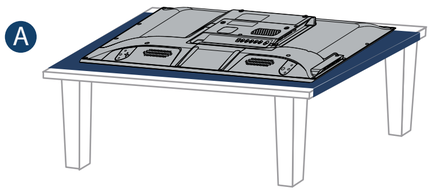

Your TV has four VESA mounting holes on the back. If you attach a wall-mount bracket to the back of your TV, **the bracket must be securely attached, using all four holes**. If you do not use all four mounting holes, your TV may fall and cause property damage or personal injury. See the documentation that came with your wall mount for complete mounting instructions.

## FEATURES

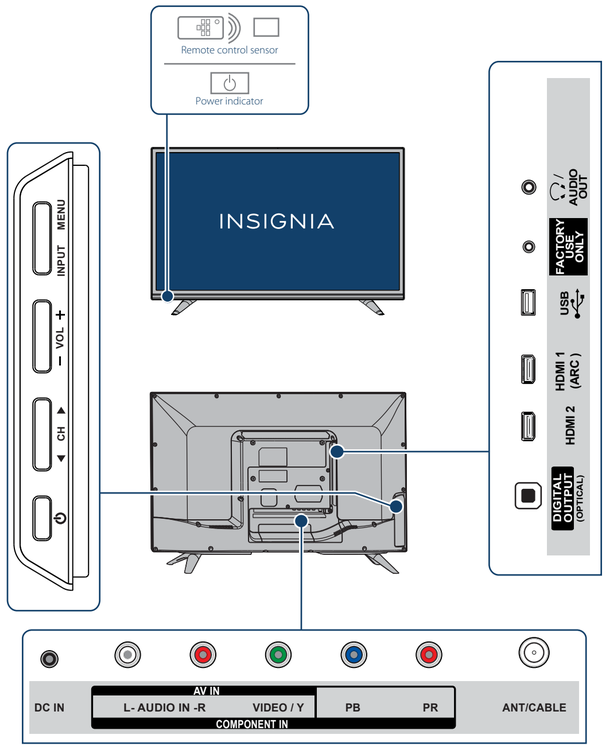


Before using your new product, please read these instructions to prevent any damage.

## 2 MAKING CONNECTIONS

How do I watch TV (cable, satellite, or antenna) or connect a device such as a DVD or Blu-ray disc player or game console?

### WHICH CABLES DO YOU HAVE?

**HDMI (BEST)**
Best video quality

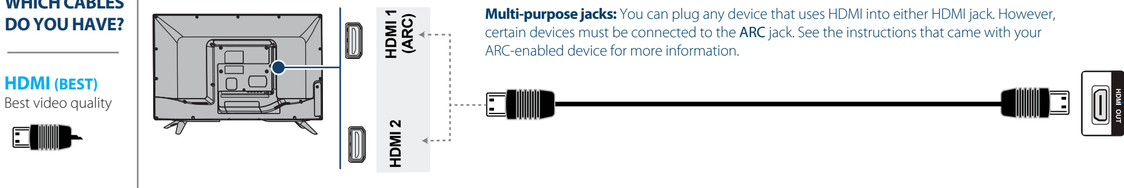


**Multi-purpose jacks:** You can plug any device that uses HDMI into either HDMI jack. However, certain devices must be connected to the **ARC** jack. See the instructions that came with your ARC-enabled device for more information.

**COMPONENT (BETTER)**

OR

**AV (GOOD)**

**Note:** The component and AV jacks are shared. This means you can connect only one component or AV device at a time. We suggest upgrading to HDMI (BEST) if your device supports it.

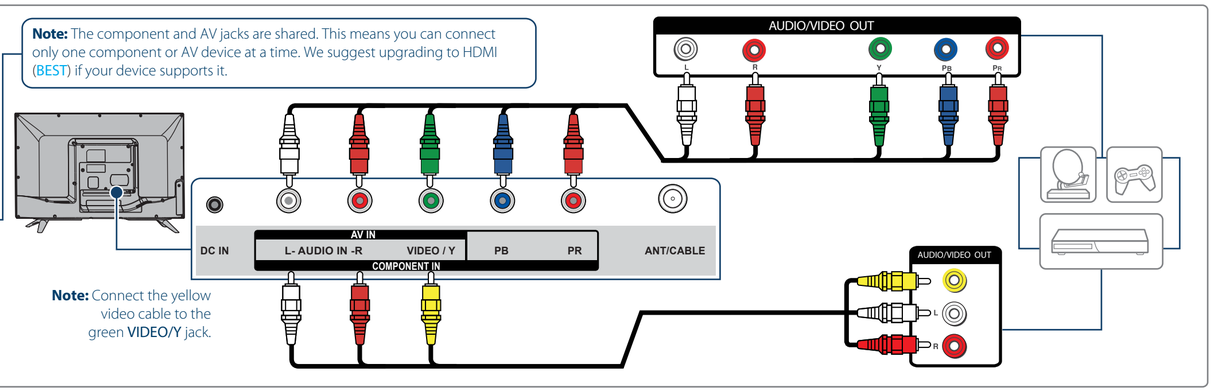


**Note:** Connect the yellow video cable to the green **VIDEO/Y** jack.

**COAXIAL (GOOD)**



## 3 CONNECTING AUDIO DEVICES
How do I connect my TV to external speakers?

### USING DIGITAL AUDIO

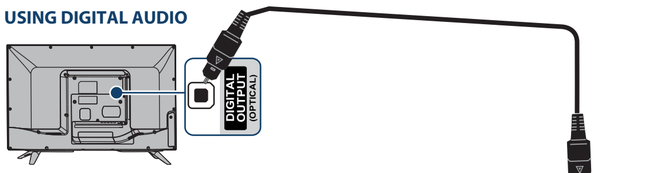


On the *Audio* menu on your TV, select **Digital Audio Format/Audio Delay**, then set **Audio Format** to **PCM**.

OR

**Note:** See the instructions that came with your speakers for more information.

### USING ANALOG AUDIO

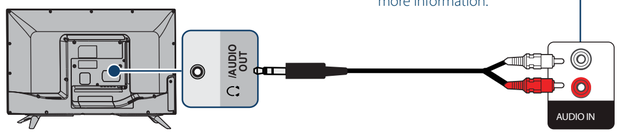


## 4 TURNING ON MY TV
When can I turn on my TV?

WHEN YOUR TV IS IN PLACE:

1 Plug the power adapter into the **DC IN** jack on the back of your TV, then plug the other end into a power outlet.

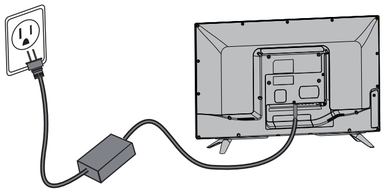

2 Remove the remote control cover and install the batteries.




3 Press (power) on your remote control.

4 Follow the on-screen instructions.

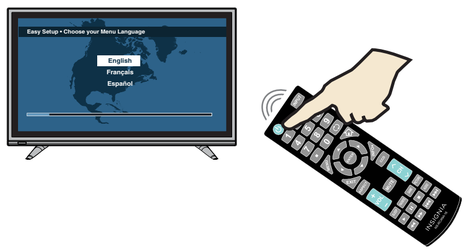


## USING YOUR REMOTE CONTROL

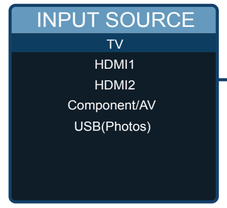


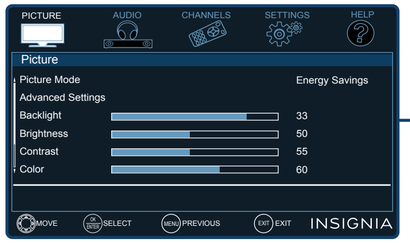


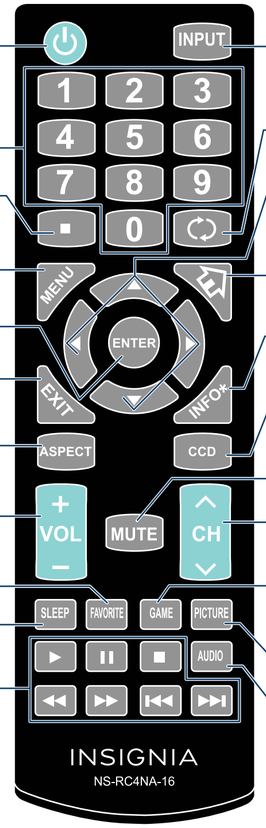


**Power**
Turns your TV on or off.

**INPUT**
Opens the *INPUT SOURCE* list.

**Numbers**
Enter channel numbers.

Enters a digital sub-channel number (for example 4.1).

**Recall**
Returns to the previous channel.

**Arrows**
Navigate in TV menus.

**MENU**
Opens the TV menu.

**Home**
Opens the TV menu.

**ENTER**
Confirms selections or changes.

**INFO***
Opens a TV status banner.

**EXIT**
Closes the TV menu.

**CCD**
Turns closed captioning on or off.

**ASPECT**
Changes how the picture is displayed on the screen.

**MUTE**
Mutes the sound.

**Volume**
Changes the volume.

**Channel**
Changes the TV channels.

**FAVORITE**
Opens the Favorite Channel List.

**Game**
Adjusts the picture for the ultimate gaming experience.

**SLEEP**
Sets the sleep timer.

**PICTURE**
Selects the picture mode.

**Media Controls**
USB - Control the photo slideshow.
INlink - Control HDMI-CEC devices connected to your TV.

**AUDIO**
Selects the audio mode.

### What are my screen-size options?

**NORMAL:** Original aspect ratio is preserved. You might see black bars if the original content is not widescreen (16:9).

**ZOOM:** Expands the image to fill the screen. The top and bottom of the image may be cropped.

**WIDE:** Use to watch content that was recorded in widescreen (16:9).

**CINEMA:** Stretches the image at the edges, but keeps a clear image in the center.

**AUTO:** Automatically adjusts the image based on the screen size and the TV program. Select this option if you don't know which aspect ratio to choose.
**Note:** Auto is only available when **Auto Aspect Ratio** in the ***Channels*** menu is set to **On**.

### I already have a universal remote control. How do I make it control this TV?

If you already have a universal remote control that you would like to program to work with your TV and don't want to use the included Insignia remote control, see the table for common codes.

| UNIVERSAL REMOTE TV CODES | |
|---|---|
| CABLE BOX, SATELLITE BOX, OR OTHER SET-TOP BOX | |
| Cablevision | 068, 069, 078, 096, 100, 164, 168, 229, 026 |
| Charter | 2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586 |
| Comcast | 10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002 |
| Cox | 1326, 1463 |
| DirectTV | 10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002 |
| Dish Network | 720 |
| Time Warner | 400, 450, 461, 456, 10463, 1463, 0463 |
| Tivo | 0091 |
| Verizon | 0198, 0490 |
| UNIVERSAL REMOTE CONTROLS | |
| One for All | 0054 |
| Philips | 0198, 0490 |
| RCA | 135 |
| Sony | 068, 069, 078, 096, 100, 164, 168, 229, 026 |

For an up-to-date list of codes for other cable providers and universal remote brands, scan this **QR code** or visit www.insigniaproducts.com/remotecodes

INSIGNIA™

**ONE-YEAR LIMITED WARRANTY**
Visit www.insigniaproducts.com for details.

**NEED ADDITIONAL HELP?**
See your online ***User Guide***! This comprehensive guide includes everything from basic how-to steps to more advanced features. A copy of your **User Guide** is not provided in the box but is available online. Go to www.insigniaproducts.com, then click **Support & Service**. Enter **NS-32D220NA16** in the box under ***Manual, Firmware, Drivers & Product Information,*** then click ▶.

Check out our **Support Community** http://community.insigniaproducts.com/ for helpful information from other Insignia TV owners.

**WE'RE HERE FOR YOU**
www.insigniaproducts.com
For customer service, call:
**877-467-4289** (U.S./Canada )

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Registered in some countries.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2014 Best Buy. All rights reserved.
Made in China

V2 ENGLISH 14-1317